

MOOER

# ShimVerb

Digital Reverb Pedal

## Owner's Manual

### Precautions

PLEASE READ CAREFULLY BEFORE PROCEEDING

#### Power Supply

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (+/-10% DC, center minus). The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

#### Connections

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

#### Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into this unit.

Take care not to drop the unit, and do not subject it to shock or excessive pressure.

#### Cleaning

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth.

Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

#### Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

#### Location

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

### Main Features

- 3 Reverb Modes: Room, Spring, Shimmer
- Full metal shell
- Very small and exquisite
- True bypass
- DC 9V Adapter power supply


### Effects Explanation

**Room:** Different sized true acoustics reverb, from room to hall.

**Spring:** Simulates a classic spring reverberation, vintage 60's Surfing sound.

**Shimmer:** Add rich overtone into the reverb sound, spacy, smooth and shining, very popular in Post Rock music.

### Panel Instruction

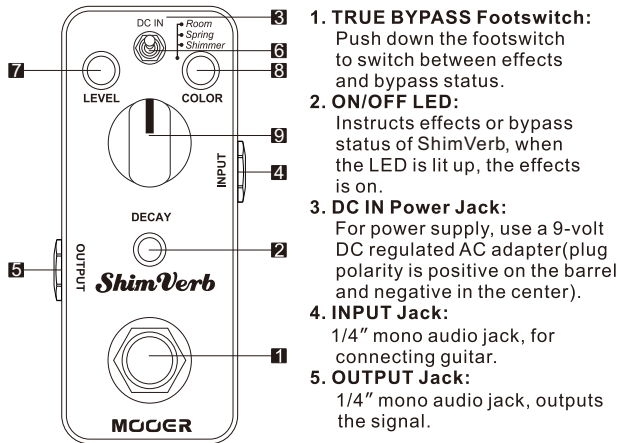

#### 1. TRUE BYPASS Footswitch:

Push down the footswitch to switch between effects and bypass status.

#### 2. ON/OFF LED:

Instructs effects or bypass status of ShimVerb, when the LED is lit up, the effects is on.

#### 3. DC IN Power Jack:

For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).

#### 4. INPUT Jack:

1/4" mono audio jack, for connecting guitar.

#### 5. OUTPUT Jack:

1/4" mono audio jack, outputs the signal.

#### 6. Mode Switch:

Switch between Room mode, Spring mode and Shimmer mode.

#### 7. LEVEL Knob:

Adjust the level of the reverb sound.

#### 8. COLOR Knob:

Adjust the tone of the reverb sound in Room mode;  
Adjust the volume of particular spring effects in Spring mode;  
Adjust the brightness of overtone in Shimmer mode.

#### 9. DECAY Knob:

Adjust the decay time of the reverb sound.

### Specification

**Reverb Modes:** 3 (Room, Spring, Shimmer)

**Input:** 1/4" monaural jack (impedance: 470k Ohms)

**Output:** 1/4" monaural jack (impedance: 100 Ohms)

**Power Requirements:** AC adapter 9V DC (center minus plug)

**Current Draw:** 128 mA

**Dimensions:** 93.5mm (D) × 42mm (W) × 52mm (H)

**Weight:** 170g

**Accessories:** Owner's Manual

\* Disclaimer: Any specification's update won't be amended in this manual.

MOOER

## ShimVerb

数字混响单块

## 用户手册

## 注意事项

\*使用前请仔细阅读\*

## 电源供应

请使用正确的交流电源插座连接电源变压器。  
 请使用内负外正的9V(+/-10%)电源变压器，最大工作电压不得超过12V，否则将会导致设备损坏，着火或者其他问题。  
 不使用时或雷雨天时请拔下电源。

## 连接

连接设备或断开连接前，请务必关闭电源及其它设备，这将有助于避免故障和损害其它设备。另外，要确保移动本机前断开所有的连接线和电源线。

## 放置场所

为防止变形、变色，及其它严重损坏，请避免以下情况：

- 阳光直射
- 热源
- 磁场
- 高温潮湿
- 多尘或不洁的地方
- 湿度较大
- 强烈震动或摇晃

## 电器干扰

在使用本机时，收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

## 清洁

请用干燥柔软的布清洁本机。如有必要，可用稍微湿润的布。切勿使用粗糙的清洁剂、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

## 操作

请勿用蛮力使用开关及控制元件。  
 请勿让纸屑、金属制品及其它物体落入机内。  
 注意不要掉落，不要使其受到冲击及过度压力。


## 性能概述

- 三种混响模式：Room/Spring/Shimmer
- 全金属外壳
- 外观小巧精致
- 纯直通设计
- 9V电源供电

## 模式说明

- Room:** 不同空间感的真实混响，从房间混响到大厅混响都可以得到。  
**Spring:** 经典的弹簧混响，标志性的60年代冲浪音乐风格。  
**Shimmer:** 拥有极其华丽的泛音和完美的空间感，在后摇音乐中非常流行的混响效果。

## 面板说明

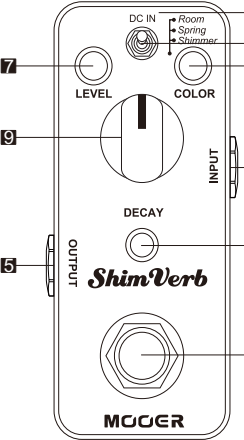- 
1. **纯直通脚踏开关：**  
 踩下脚踏开关以选择效果的开关。
  2. **LED指示灯：**  
 显示ShimVerb的工作状态，当指示灯亮时为效果开启。
  3. **电源接口：**  
 电源供给，使用9V直流变压器(内负外正)。
  4. **输入：**  
 1/4"单声道音频接口，连接吉他。
  5. **输出：**  
 1/4"单声道音频接口，输出信号。
  6. **模式切换开关：**  
 选择Room模式，Spring模式或者Shimmer模式。
  7. **LEVEL旋钮：**  
 调节混响效果的音量。
  8. **COLOR旋钮：**  
 在Room模式下调节混响效果的音色；  
 在Spring模式下调节弹簧混响特有  
 效果的音量；  
 在Shimmer模式下调节泛音的亮度。
  9. **DECAY旋钮：**  
 调节混响效果的衰减时间。

## 技术参数

- 混响模式：** 3 (Room/Spring/Shimmer)  
**输入：** 1/4"单声道音频接口(阻抗：470k Ohms)  
**输出：** 1/4"单声道音频接口(阻抗：100 Ohms)  
**电源供给：** 9V直流变压器(内负外正)  
**工作电流：** 128 mA  
**尺寸：** 93.5mm (D) × 42mm (W) × 52mm (H)  
**重量：** 170g  
**附件：** 用户手册

\*免责声明：参数更新恕不另行通知。